MODEL / MODELE
103976

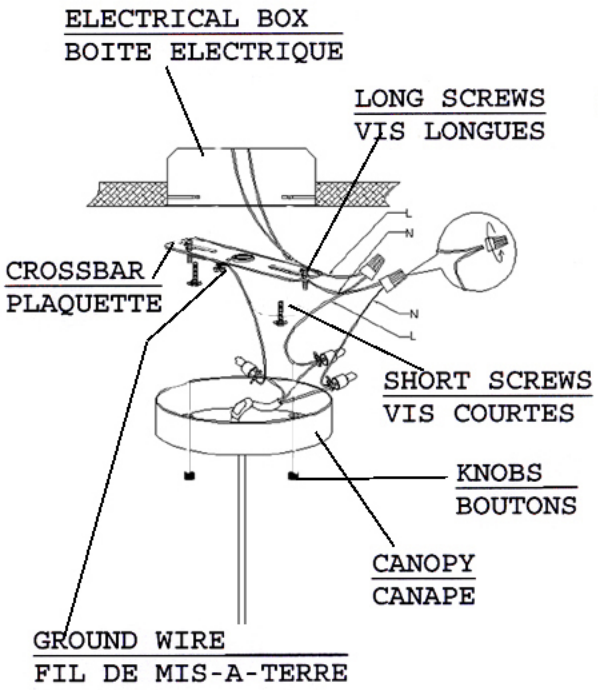

MOUNTING INSTRUCTIONS

1. TURN OFF THE POWER.
2. THREAD THE 2 LONG SCREWS INTO THE CROSSBAR, AND ATTACH THE CROSSBAR TO THE ELECTRICAL BOX WITH THE SHORTER SCREWS.
3. MAKE THE WIRE CONNECTIONS. CONNECT BLACK TO BLACK WIRE AND WHITE TO WHITE WIRE. ATTACH GROUNDING WIRE TO CROSSBAR GROUNDING SCREW.
4. ALIGN THE HOLES IN THE CANOPY WITH THE 2 LONG SCREWS IN THE CROSSBAR, AND PLACE THE CANOPY ONTO THE SCREWS. SECURE THE CANOPY IN PLACE WITH THE KNOBS.
5. HANG THE GLASS STRANDS ONTO THE SHADE FRAME.

INSTRUCTIONS D'INSTALLATION

1. COUPER LE COURANT.
2. INSERER LES 2 VIS LONGUES DANS LA PLAQUETTE ET JOINDRE LA PLAQUETTE A LA BOITE ELECTRIQUE AVEC LES VIS PLUS COURTES.
3. RACCORDER LES FILS, LE NOIR AU NOIR ET LE BLANC AU BLANC. ATTACHER LE FIL DE MISE-A-TERRE AUX VIS DE MISE-A-TERRE DE LA PLAQUETTE.
4. ALIGNER LES TROUS SUR LE CANAPE AVEC LES VIS LONGUES DANS LA PLAQUETTE, ET PLACER LE CANAPE SUR LES VIS. SECURISER LE CANAPE AVEC LES BOUTONS.
5. ACCROCHER LES FILS DE VERRE SUR LE CADRE DE L'ABAT-JOUR.

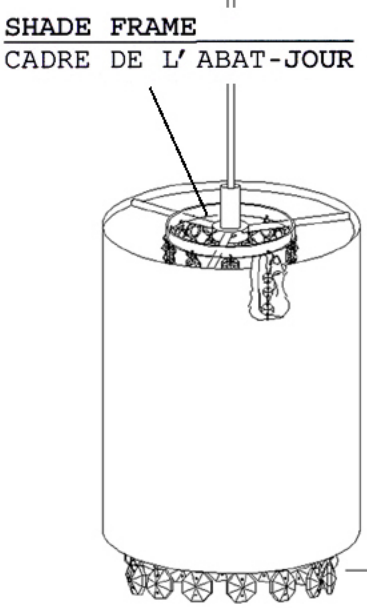

11 x GLASS STRANDS
FILS DE VERRE

#1976